HOME
DECORATORS
COLLECTION

BF-25194 AUSTELL DOUBLE VANITY 35″Hx67″Wx22″D

INV#19392

ASSEMBLY INSTRUCTIONS

Made In China

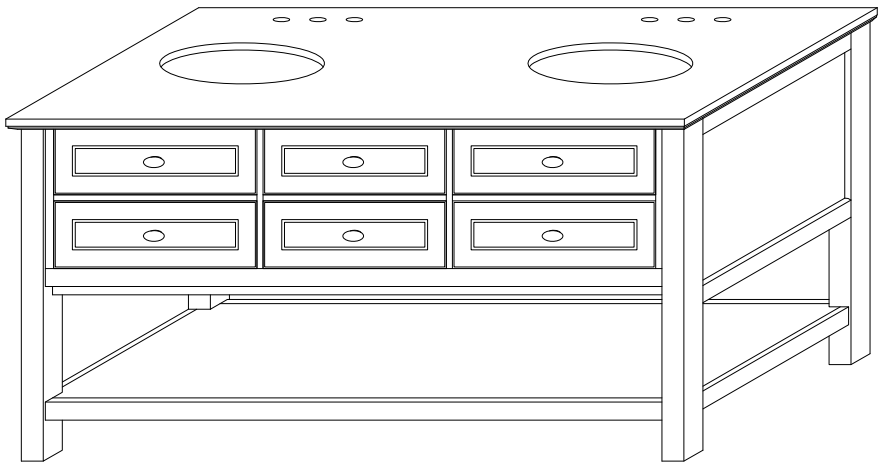

PRODUCT SPECIFICATION:

- NATURAL GRANITE TOP PRE-ASSEMBLED
- (67W x 22D x 35H) INCH
- N.W.: 220LBS G.W.243LBS

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST

A FRAME-1PC	B 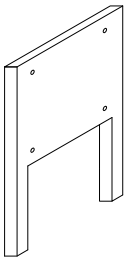 SIDE PANELS-2PCS	C  BOTTOM PANEL-1PC
D 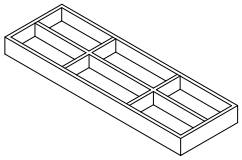 TRAYS-2PCS	E 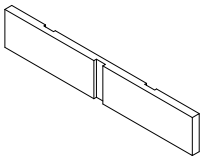 PANELS-4PCS	F  PANELS-8PCS
G  FOOT-1PC	H  ALLEN WRENCH-1PC	I 13mm × 1-3/4"  BOLTS-12PCS
J WASHERS-12PCS	K  FEET-4PCS	

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

HOW TO SEPARATE GLIDES

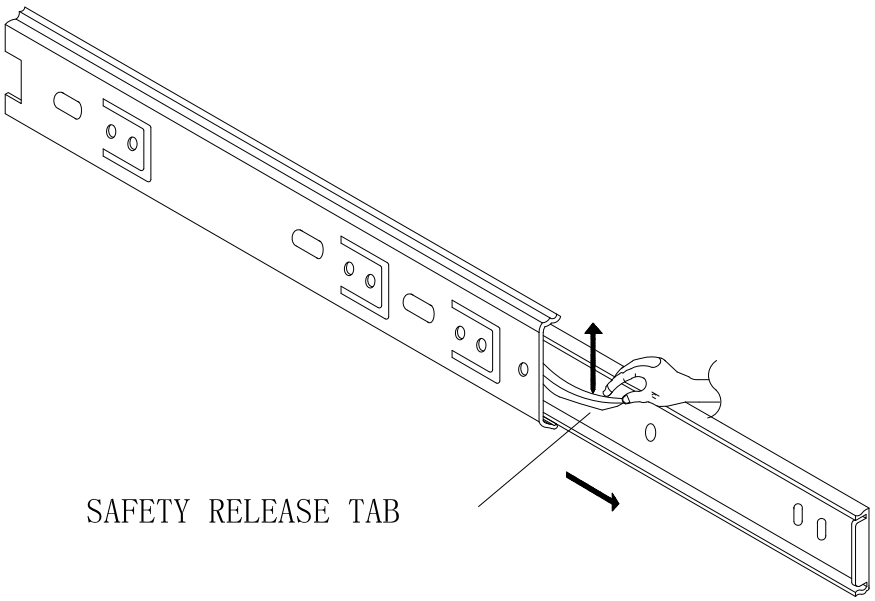

PRIOR TO ASSEMBLY, WE SUGGEST SEPARATING THE INNER GLIDES FROM THE OUTER GLIDES, SIMPLY PULL THE LEFT/RIGHT INNER GLIDES FROM THE OUTER GLIDES EXPOSING A SMALL BLACK SAFETY RELEASE TAB, BY PUSHING THE SAFETY RELEASE TAB. YOU WILL BE ABLE TO SEPARATE THE GLIDE.

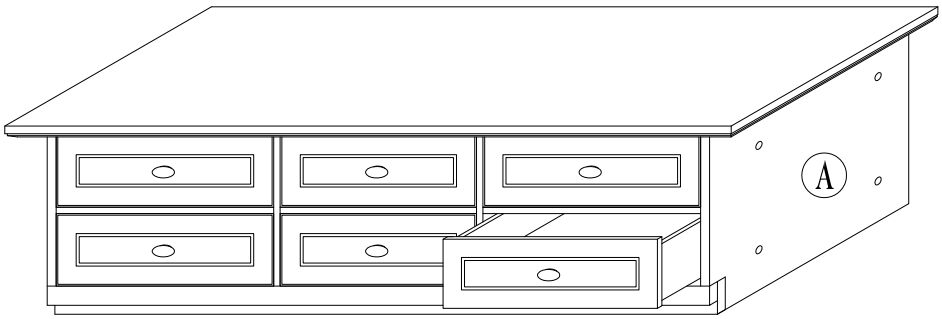

1). REMOVE THE DRAWERS.

- REMOVE THE DRAWERS.

IN ORDER TO ASSEMBLE THE BOTTOM PANEL.
PLEASE DON'T TIGHTEN THE BOLTS.

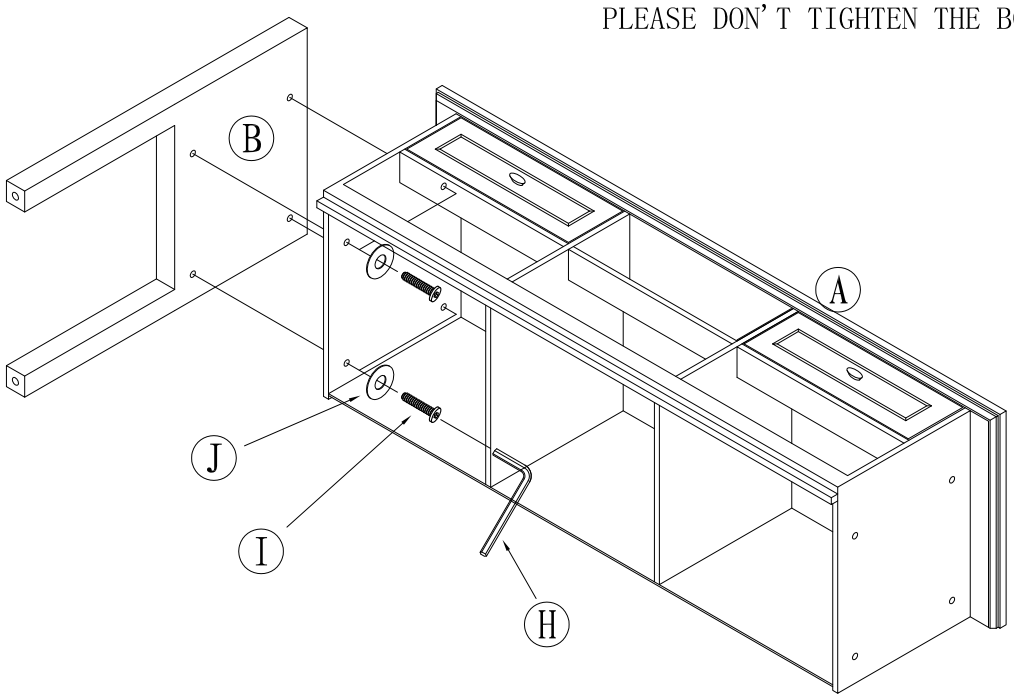

2). ASSEMBLE THE SIDE PANEL(B).

- ATTACH THE SIDE PANEL(B) TO FRAME(A) USING 4 BOLTS(I) AND 4 WASHERS(J).

IN ORDER TO ASSEMBLE THE BOTTOM PANEL.
PLEASE DON'T TIGHTEN THE BOLTS.

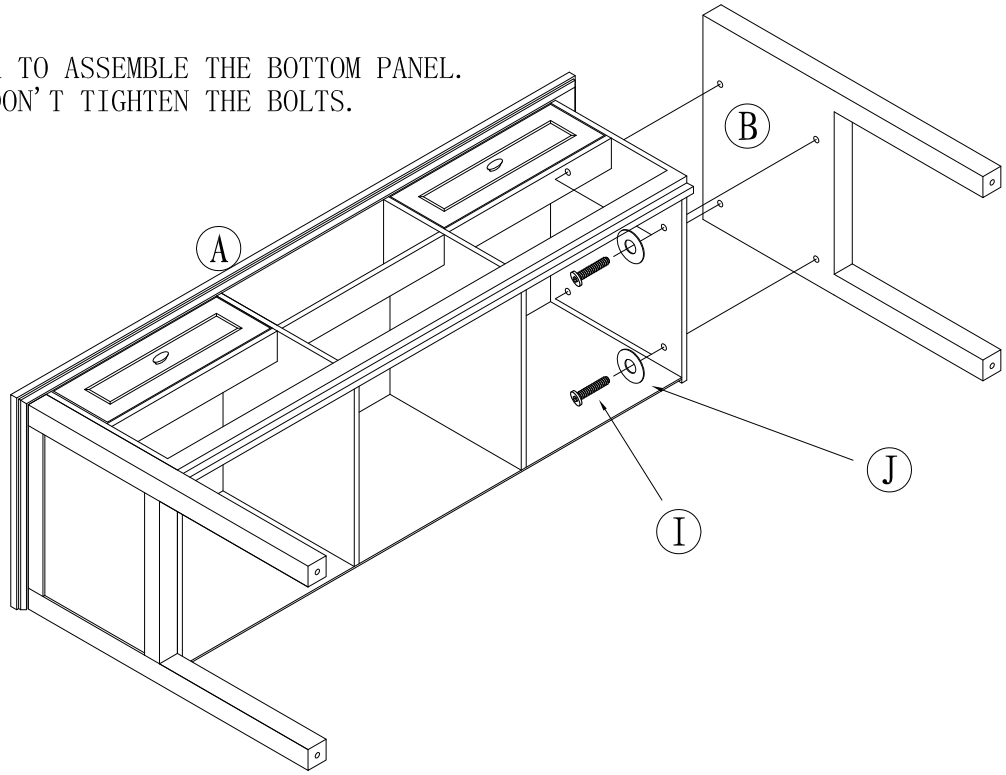

3). ASSEMBLE THE SIDE PANEL(B).

- ATTACH THE SIDE PANEL(B) TO FRAME(A) USING 4 BOLTS(I) AND 4 WASHERS(J).

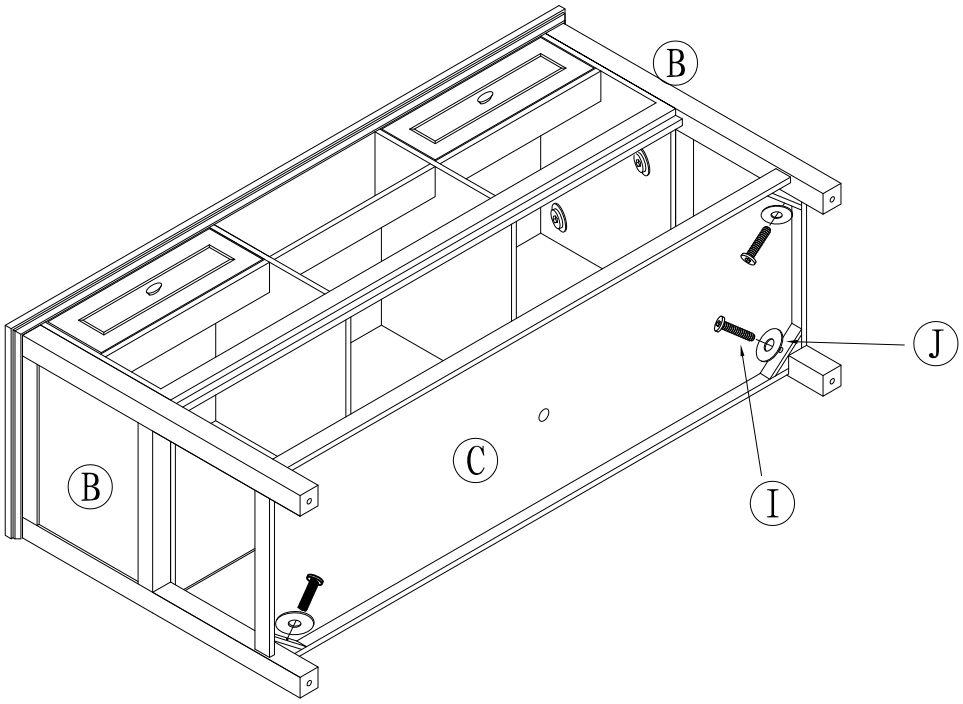

4). ASSEMBLE THE BOTTOM PANEL(C).

- ATTACH THE BOTTOM PANEL(C) TO SIDE PANEL(B) USING 4 BOLTS(I) AND 4 WASHERS(J).
  PLEASE TIGHTEN ALL THE BOLTS. ONCE THE BOTTOM PANEL ASSEMBLE.

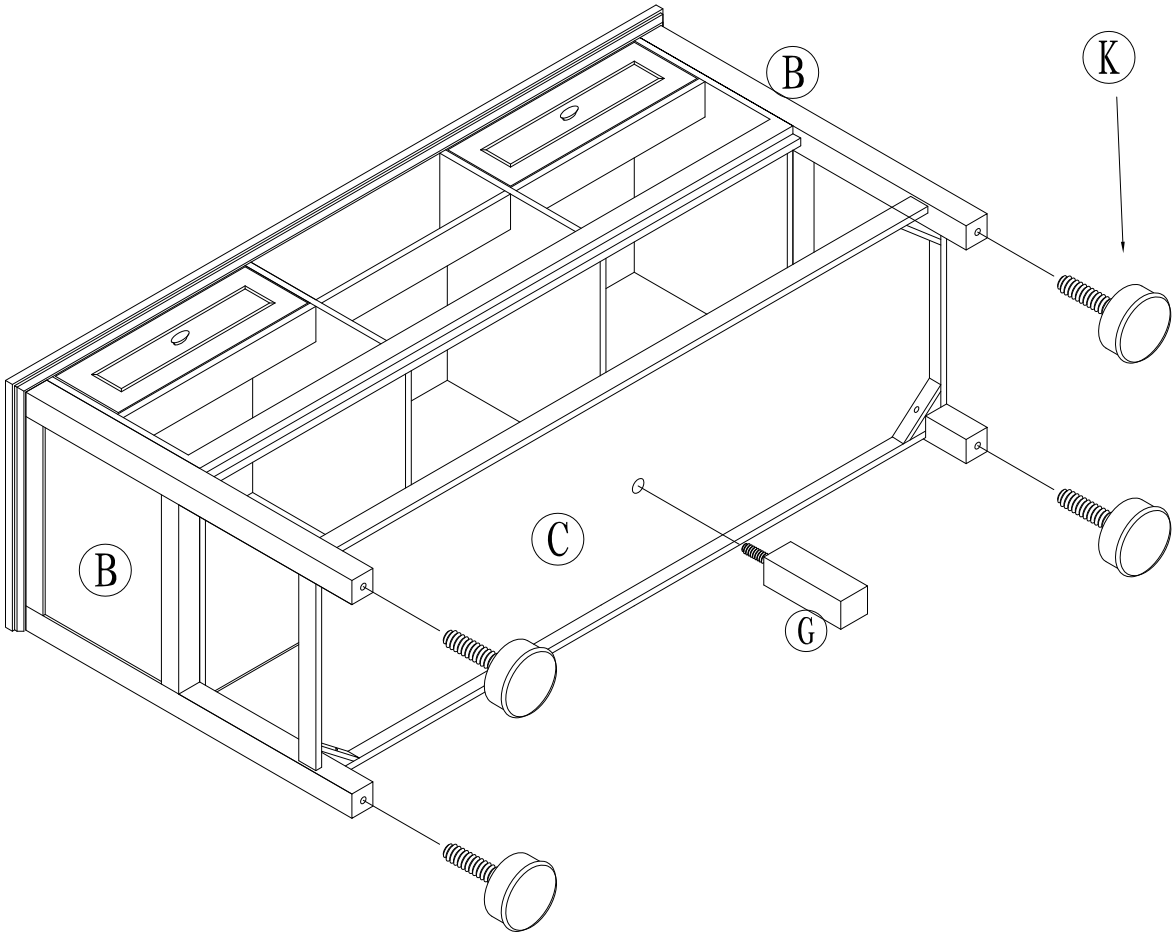

5). ASSEMBLE THE FOOT(G) AND FEET(K).

- ROTATE THE FOOT(G) INTO THE HOLES IN THE BOTTOM PANEL(C).
- ROTATE THE FEET(K) INTO THE HOLES IN THE SIDE PANELS(B).

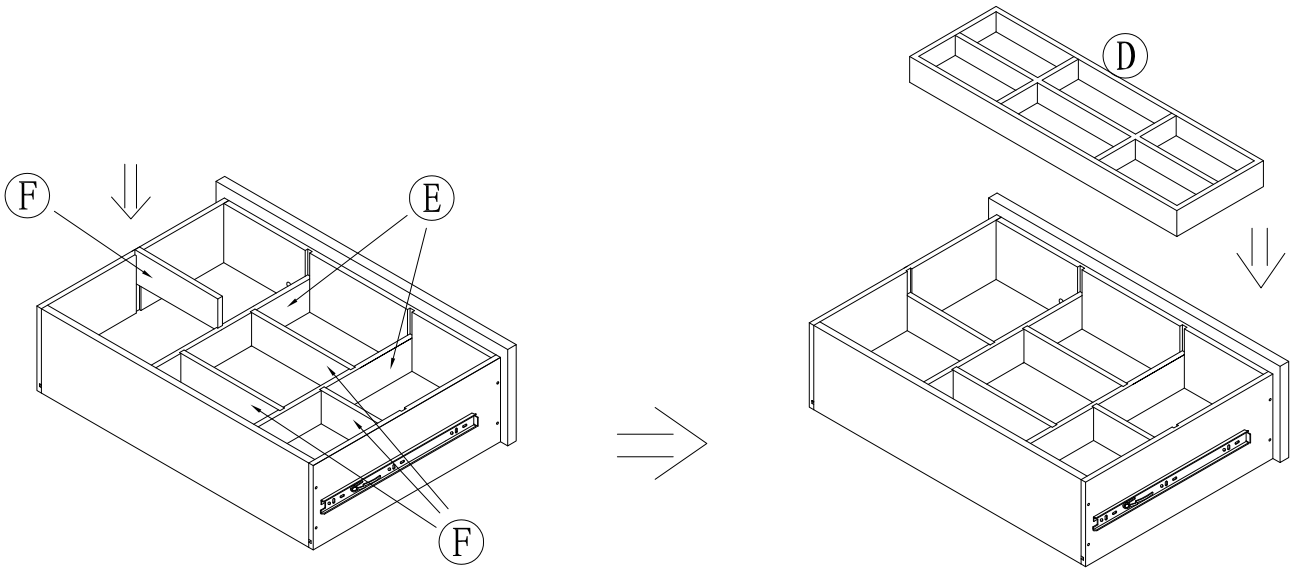

6). ASSEMBLE THE DRAWER.

- INSERT THE PANELS(E/F) INTO SLOTS IN THE MIDDLE OF DRAWER.
- PUT THE TRAY(D) ON THE PANELS(E/F).

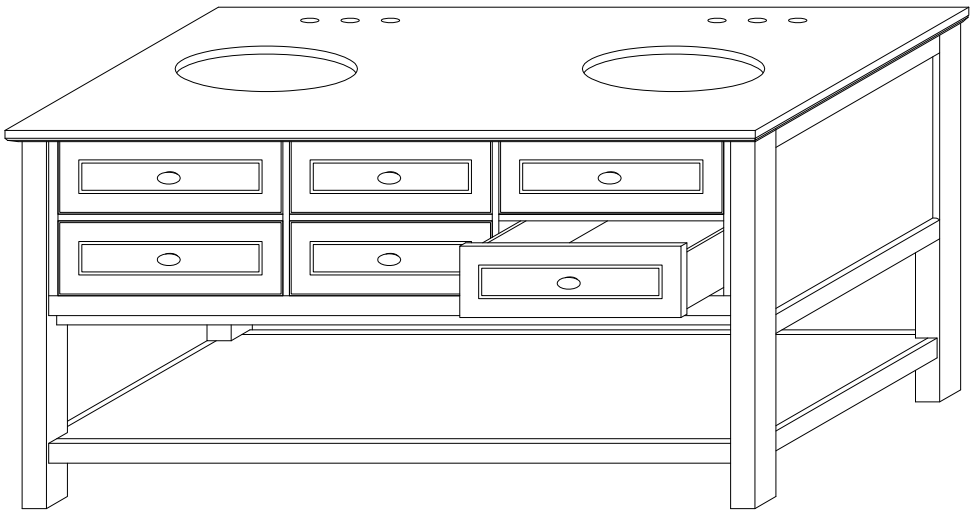

7). ASSEMBLE THE DRAWER.

- INSERT THE DRAWER INTO THE SLIDES.